

SECTION C

How To Use This Manual

Contents

Special Notes.....	C-1
Do	C-2
Don't	C-2
Flow Chart	C-2

How To Use This Manual

SPECIAL NOTES:

- This manual is designed to assist the service technician in diagnosing and correcting driveability engine malfunctions.
- The manual consists of three parts:
 - Part I - General Information, Sections 1-5
 - Part II - Mechanical Systems, Sections 6-13
 - Part III - Electronic Systems, Sections 14-17
- In each case, begin diagnosis with Section 2, Diagnostic Routines. Section 2 defines the probable causes of the vehicle's symptoms. It functions as a checklist to ensure that all potential causes are reviewed. Refer to the Flow Chart on page C-2.
- If a diagnostic procedure does not find the solution to a vehicle symptom, it is important to return to Section 2 to review all other possible causes of the symptom, as shown in the Flow Chart on page C-2.
- Refer to Section 3 for component descriptions, part numbers, and component locations.
- Refer to Section 4 for Electrical Schematic Diagrams, Connector Pin Usage, Quick Test Codes and Code definitions, and Mechanical Schematic Diagrams.
- Section 5 defines the terms used in this manual.

How To Use This Manual

DO

- Refer to Section 1, Emission Control Identification/Application, to identify the emission components on the vehicle.
- Begin diagnosis with the Diagnostic Routines in Section 2.
- Read all special notes.
- Prevent any unsafe or hazardous conditions by following the notes, cautions and warnings listed at the beginning of this book.
- After service, always verify that the repair corrected the customer complaint.

DON'T

- Skip from Section to Section.

Flow Chart

